

快速操作手册

Quick guide

クイック・ガイド



PAW 5000

MKII

目录

Table of Contents | 目次

中文

包装内容
按键功能
安装 TF 卡
电源
升级
运动臂带组装
蓝牙播放使用说明
注意事项

EN


Package content
Key Definitions
Install the TF card
Power
Firmware update
Assembly of arm belt for sport
Bluetooth
Notes

日本語


内容物
各キーの名称と機能
TF カードを取り付けます
電源
ファームウェアのアップデート
スポーツ用アームベルトの取り付け
ブルートゥース
注意

LOEKO**PAW 5000 MKII****快速操作手册**

主机

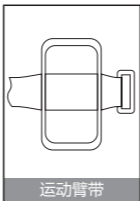

运动臂带

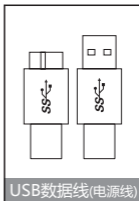

USB数据线(电源线)




快速操作手册



保修说明



按键功能

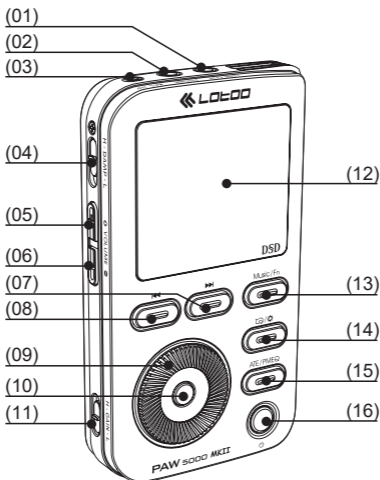


(01)	线路输出 /SPDIF 光纤输出
(02)	耳机输出
(03)	平衡式耳机输出 (2.5mm)
(04)	阻抗选择 (高 / 低)
(05)	音量增大
(06)	音量减小
(07)	下一曲 / 快进
(08)	上一曲 / 快退
(09)	数字转盘
(10)	播放 / 暂停 / 确认 (播放界面中长按可切换屏幕信息)
(11)	增益选择 (高 / 低)
(12)	显示屏
(13)	Music/Fn
(14)	返回 / 设置
(15)	ATE/PMEQ 音效
(16)	锁屏 / 电源

提示：(13) (14) (15) 三个按键，短按为“/”左侧功能，长按为“/”右侧功能。


安装 TF 卡

1、装入 TF 卡（如图示一）

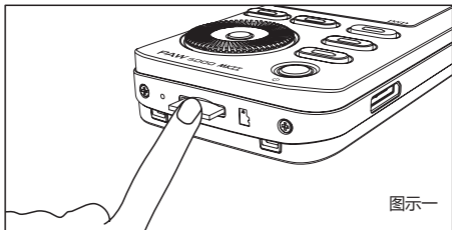

按壳体标识方向将 TF 卡插入卡槽，轻推至听到卡座锁定声后松手，TF 卡安装完成。

2、取出 TF 卡（如图示二）

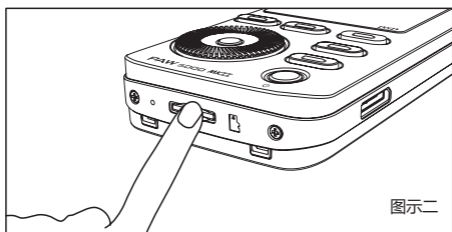

轻推 TF 卡至听到卡座声响后缓慢松手，TF 卡弹出约 3mm，直接取卡即可。

提示：

- 1) 本机需要插入 TF 卡才可正常开机，机器本身无内存容量。
- 2) 本机最大支持 2TB 的 TF 卡。
- 3) 本机支持 FAT32/ exFAT 格式的 TF 卡，建议将 TF 卡插入本机进行格式化后再正常使用。
- 4) 请勿强行抽取 TF 卡，强行取卡可能造成 TF 卡座的损伤或损坏。
- 5) 运动臂带支架内可存放四张 TF 卡，请按照标识方向存放。


电源

1、打开本机

播放器关闭时，长按“电源键”，可启动本机。

播放器开启状态时，短按“电源键”可激活或者关闭液晶显示屏。当液晶显示屏关闭时，只有“电源键”、“音量+”、“音量-”三个按键功能可用。

建议长时间欣赏音乐时关闭液晶显示屏，以提高播放器续航能力。

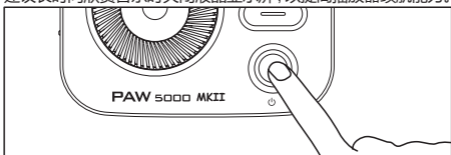

2、关闭本机

- 1) 播放器为开启状态且屏幕点亮时，长按“电源键”，可关闭本机；
- 2) 播放器为开启状态但屏幕熄灭时，先短按“电源键”激活屏幕后，再长按“电源键”，可关闭本机。

3、充电


通过电源适配器将本机连接至 220V 电源，机器开始自动充电。

- 本机通过 USB 3.0 端口对电池进行充电。
- 充电时播放功能：本机外接电源适配器，可为供电电路与充电电路同时供电。因此您可以选择在充电时播放歌曲，不影响电池充电（充电时间与电源适配器输出功率相关）。

提示：电源适配器需另行购买。

升级


- 1、请保持本机电量高于 20% 时进行升级。若电量低于 20%，请您先补充电量，再进行系统升级；
- 2、登陆乐图 lotoo 官网 www.lotoo.cn，进入下载页面。下载最新固件，并将压缩包内的“PAW5KMK2.COE”文件拷贝到本机 TF 卡根目录下；
- 3、进入设置，点击【菜单 > 系统设置 > 系统升级】。等待系统升级完成。正确的升级将执行以下过程：

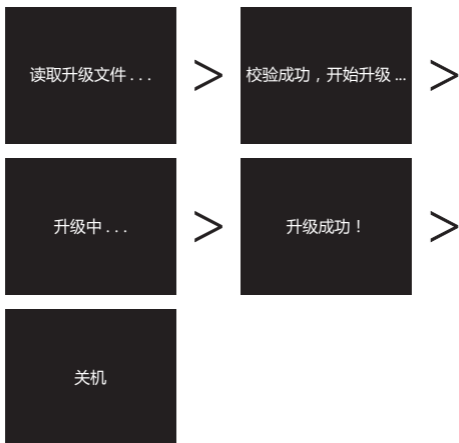


- 4、正确升级后，机器将自动关机。再次开机，您可以在【菜单 > 系统设置 > 系统信息】中查看最新的软件版本号。

运动臂带组装

1、如下图所示，将臂带有大面积尼龙搭扣一面朝外，从支架左侧穿入，然后从右侧穿出；

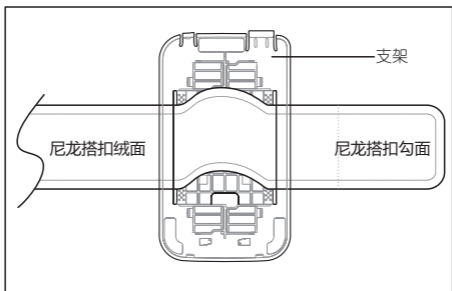

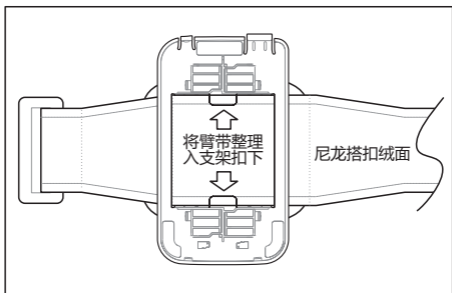

2、如下图所示，将臂带往右侧拉至尼龙搭扣绒面完全露出支架右侧，将臂带整理入支架扣下；




3、将整机底端斜插入支架底端，使支架下方的两个卡钩卡入整机底端凹槽，将整机上端卡入卡钩。

注意：播放器安装在支架上存放时会造成播放器损坏！当不使用运动臂带功能时，请将播放器从臂带支架上取下。


蓝牙播放使用说明

1、长按 /  进入设置菜单，并打开【蓝牙设置】选项，如图一；

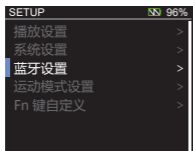

图一

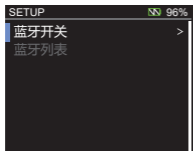

2、进入【蓝牙开关】选项并选择【开】，如图二、三；



图二



图三

3、短按 /  返回上一层菜单，进入【蓝牙列表】，如图四；



图四

4、打开蓝牙音箱或耳机的配对模式，在【蓝牙列表】中选择【扫描新设备】，如图五、六；



图五



图六

5、屏幕上会显示可连接的蓝牙设备，当发现设备后可按确认键停止扫描，如图七；



图七

6、选中蓝牙设备名称，按确认键进行配对并连接，如图八、九；



图八



图九

7、当设备右侧显示“已连接”，说明连接成功，如图十；



图十

8、连接成功后，即可通过蓝牙设备聆听音乐；

注意事项

1、产品安全

- 请勿自行拆卸本机，否则可能会导致损坏或故障；
- 请勿在雷电天气里使用本机，否则可能会造成损坏；
- 请勿在尘土或烟雾较多的地区使用本机，否则可能会导致损坏或故障；
- 请勿摔打本机及其附件产品，否则可能造成严重损坏或故障；
- 请勿用化学溶剂或洗涤剂清洁本机，否则可能造成损坏；
- 请勿将本机靠近强磁性的物质，否则可能会导致损坏或故障；
- 请勿将重物放置于本机上，否则可能会导致损坏或故障；
- 请勿在可能遭受水滴、水溅或湿气过重的环境中使用本机，否则可能会造成电路损坏或燃烧；
- 请勿在本机上放置诸如花瓶一类的装满液体的物品，否则可能会造成电路损坏或燃烧。

2、电池安全

- 请勿将本机置于火中，或加热本机，否则可能会造成电池爆炸；
- 若电池有高温发热的现象，请立即停止使用，否则可能造成损坏；
- 只能用同样类型或等效类型的电池来更换，如果电池更换不当会有爆炸危险。

3、听力安全

- 当进行耳机和线路输出的插入和拔出动作前，请先停止音乐播放，并将播放音量调至最小；



LOtOO






PAW 5000 MKII

Quick guide

Package content


The package includes following accessories (The quantity for each accessory is one). Please carefully verify when purchasing. If anything absent, please contact with the device supplier timely.

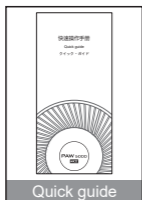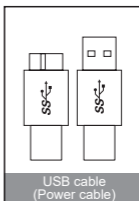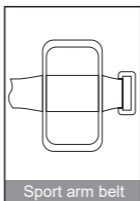

Notes: Lotoo official website supply electronic version of the User manual book and fast setup.

Please visit www.lotoo.cn and download.

Key functions

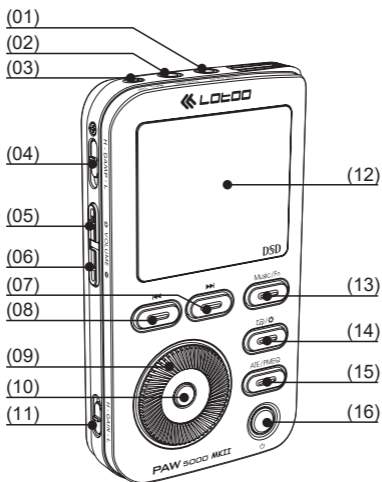


(01)	Line output /SPDIF Optical fiber output
(02)	Headphone output
(03)	Balance type headphone output (2.5mm)
(04)	damp (high/low)
(05)	Volume up
(06)	Volume down
(07)	Next/Fast forward
(08)	Previous/Fast reverse
(09)	Jogdial
(10)	Play/ OK
(11)	Gain (high/low)
(12)	Liquid crystal display
(13)	Music/Fn (long press)
(14)	Return/Setup (Long press)
(15)	ATE/PMEQ music effects
(16)	Power/lock Screen

Notes: the buttons of (13) (14) (15), short press will show you the left functions of buttons, long press will show you the right functions of buttons.


Install the TF card

1. Inserting the TF card (As shown in figure1)

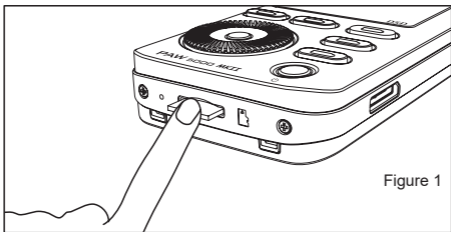

Insert the TF card into the slot according to the shell logo direction, push to hear "beep" sound and release. Then the TF Card is installed.

2. Pull out the TF card (As shown in figure 2)

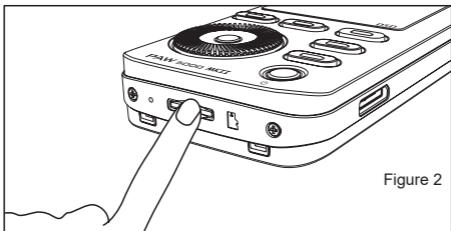

Gently push the TF card bottom to hear "Di" sound, then slowly let go. You can see TF Card pops up about 3mm. then you can directly take the card.

Notes:

- 1) The device will turn on normally when the TF card is inserted. The device if self hasn't memory capacity.
- 2) Theoretically, the device can support TF card with 2T capacity maximum.
- 3) The device can support the TF card with FAT32/ exFAT format. So we advise: When inserting the TF card, please format it first before use.
- 4) When inserting or pulling out the TF card, please be gentle, otherwise it may cause damage to the TF card.
- 5) You can place four TF cards into the moving arm belt's bracket. Please follow the direction of identification.


Power

1. Power on

When powered off, long press "POWER" to turn on the device.

When powered on, short press "POWER" to activate or turn off the screen. When the screen is turned off, you can only operate the "POWER", "Volume+", and "Volume-" button.

Advice: when you play music long time, please turn off the screen to improve this player's endurance performance.

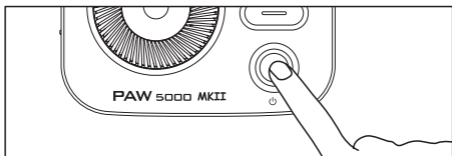

2. Power off

- 1) The player is turned on and the screen is

lighted, long press "POWER". And it will turn off.

2) The player is turned on and the screen is out, firstly press "POWER" to activate the screen. Then long press "POWER", you can turn off the device.

3. Recharge

This device will recharge automatically when connect to 220V power supply with the power adapter. When the player is off, long press <power > to turn on the device.

- Playing while charging: The externally connected power adapter can supply power to the device while charging the Lithium battery. Therefore, you can choose to play music when charging the Lithium battery, which has no influence on the charging performance.


Notes: you need buy the power adapter separately.

Firmware update

1. To update, please make sure that the battery is higher than 15%. If not, please charge it first;
2. Please visit the Lotoo official website www.lotoo.cn, enter the download page.

Download the latest firmware, and copy the "PAW5KMK2.COE" file inside the compressed package to the root of TF card;


3. Enter the settings, click **【Menu>System settings>System update】** . Then wait for the completion of update The correct update will perform the following process:

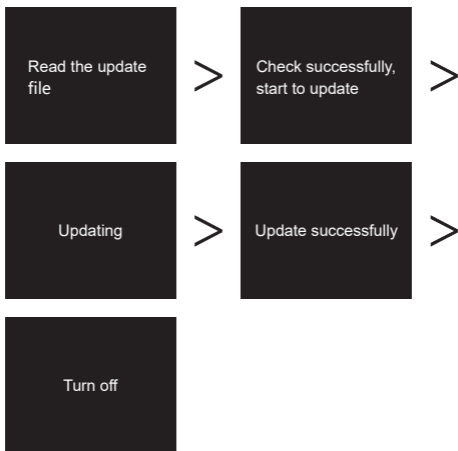


4. After the correct update, the machine will turn off automatically. turn it on again, you can check the latest software version number at **【Menu>System settings >System information】** .

Assembly of arm belt for sport

1. As showing below, let the arm belt's large area of Velcro side outwards, penetrating from left side, penetrating from the right side;

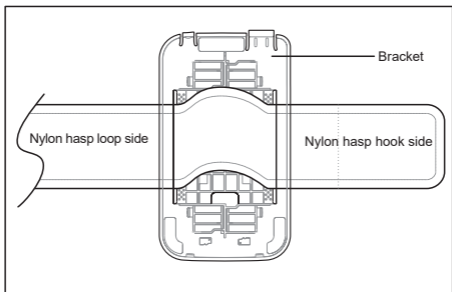

2. As showing below, pull out the arm belt (from the right side) to the nylon hasp loop side and show the bracket's right side. Then arrange the arm belt below the bracket;

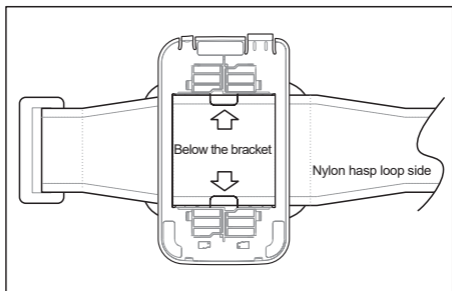



3. Please insert obliquely this device's bottom into the end of the bracket. And snap two card hook below the bracket into the groove of device's bottom. Then snap the upper end of this device into card hook.

Notes:

This device will be damaged if you place it at the bracket.

Please take the device off from the bracket when you don't use the sport arm belt.

Bluetooth

1. Long press / to enter into SETUP menu, then click **【System settings>Bluetooth settings】** as shown in Figure 1;

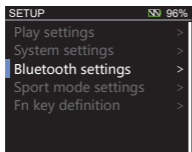


Figure 1

2. Select **【Bluetooth switch】**, press **【OK】** and set it to **【ON】**, as shown in Figure 2, 3;

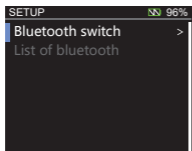


Figure 2

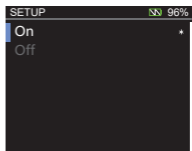




Figure 3

3. Short press / to back to the previous menu, enter into **【List of bluetooth】** , as shown in Figure 4;

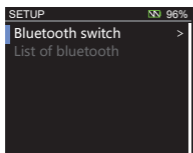


Figure 4

4. Power on your Bluetooth headphone or speaker, and activate the pairing mode. Select **【scan for new device】** on PAW 5000, as shown in Figure 5, 6;

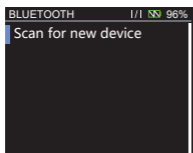


Figure 5

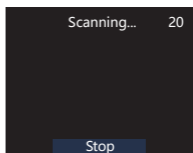


Figure 6

5. When you see the name of your device, press **【OK】** to stop the scanning, or wait till the scanning finish after some seconds, as shown in Figure 7;

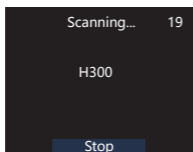


Figure 7

6. Select on the device name and press **[OK]** to connect, as shown in Figure 8, 9;

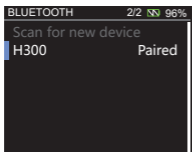


Figure 8

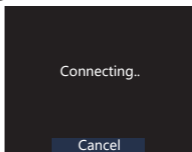


Figure 9

7. When it shows "connected" at the right of the device. The connection is done, as shown in Figure 10.

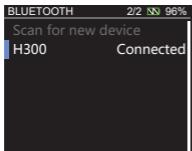


Figure 10

8. When the connection is completed, you can enjoy your music with Bluetooth.

Notes

1. Devices safety operations

- Please do not disassemble the device. Otherwise it may cause damage for the device.
- Please do not use this device in the lightning weather. Otherwise it may bring you some harms.
- Please do not use the device in heavy dust or smoke areas. Otherwise it may cause damage or malfunction.

- Please do not beat this device and its accessories. Otherwise it may cause serious damage or malfunction.
- Please do not clean this device with Chemical solvent or detergents. Otherwise it may cause damages.
- Please do not let this device close to strong magnetic material. Otherwise it may cause serious damage or malfunction.
- Please do not place heavy things on the device. Otherwise it may cause damage or malfunction.
- Please use this device in excessive moisture environment. Otherwise it may cause damage to the circuit.

2. Battery safety operations

- Please do not place the battery in fire or heat the battery. Otherwise the battery may explode.
- If there is a high temperature heating phenomenon on the battery, please stop using it immediately.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions. Otherwise it may bring you damages.

3. Volume safety operations

- To prevent possible hearing damage. Do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before.







PAW 5000 MKII

クイック・ガイド


内容物

このパッケージには以下の付属品が入っています。ご購入時に確認いただき、もしも入っていないものがございましたら、ご購入店にご連絡ください。

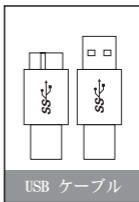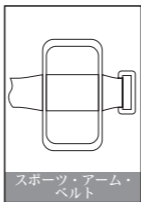

注：lotoo の公式ウェブサイト (lotoo.jp) に電子版ユーザマニュアルと簡易セットアップ方法を掲載しております。

各ボタンの名称と機能

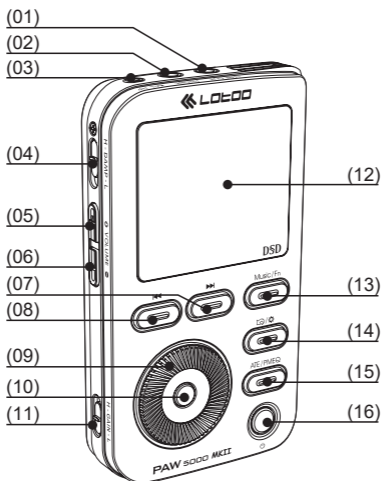


(01)	ライン出力 / SPDIF 光出力
(02)	ヘッドフォン出力
(03)	バランス・ヘッドフォン出力 (2.5mm TRRS)
(04)	DAMP (ハイ/ロー)
(05)	ボリューム・アップ
(06)	ボリューム・ダウン
(07)	次曲 / 早送り
(08)	前曲 / 早戻し
(09)	ジョグダイヤル
(10)	再生 / OK
(11)	ゲイン (ハイ/ロー)
(12)	液晶ディスプレイ
(13)	音楽 / ファンクション (長押し)
(14)	戻る / 設定 (長押し)
(15)	ATE / PMEQ 音響効果 (長押し)
(16)	電源 / スクリーン・ロック

ヒント：(13), (14), (15) ボタンは短押しで左側、長押しで右側の機能になります

micro SD カードの挿入


1.micro SD カードを挿入 (Figure1)

筐体に印刷されている向きでmicro SDカードを挿入します。押し込んで「カチッ」という音が聞こえたら指を離します。

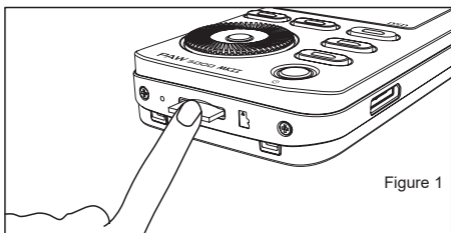

2.micro SD カードを取り (Figure2)

micro SDカードを静かに押して「カチッ」という音が聞こえたらゆっくりと指を離します。micro SDカードが3mmほど飛び出てくるので、そのまま取り出してください。

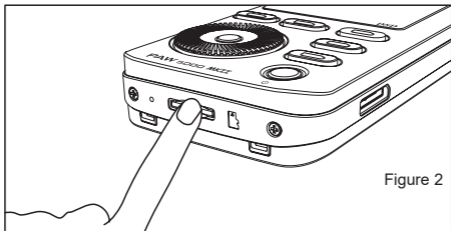

補足：

1.micro SD カードを挿入すると、プレーヤーの電源

が自動的にオンになります。プレーヤー本体にメモリーは内蔵されていません。

2. 理論的には、このプレーヤーは最大 2 TB までの micro SD カードをサポートしています。
3. このプレーヤーは FAT32/exFAT フォーマットの micro SD カードをサポートしています。新しい micro SD カードを挿入する時は、先にフォーマットしてください。
4. micro SD カードを挿入したり抜いたりする時は、丁寧に行ってください。乱暴に扱うとカードが破損することがあります。
5. 移動用のアームベルトのブラケットに 4 枚まで micro SD カードを収納することができます。

電源

1. 電源オン


プレーヤーの電源がオフの状態から電源をオンにするには、「POWER」ボタンを長押しします。

電源がオンの時に画面表示をオン／オフにするには、「POWER」ボタンを短押しします。画面表示がオフの時には、「POWER」、「Volume +」、「Volume -」ボタン以外は使うことができません。

補足：音楽を長時間再生する時には、画面表示をオフにすることでバッテリーの持ちを延ばすことができます。

2. 電源オフ

- 1) 電源がオンでスクリーン表示もオンになっている時に電源をオフにするには、「POWER」ボタンを長押ししてください。
- 2) 電源がオンでスクリーン表示がオフになっている時に電源をオフにするには、まず「POWER」ボタンを短押しして画面表示をオンにし、その後に「POWER」ボタンを長押ししてください。

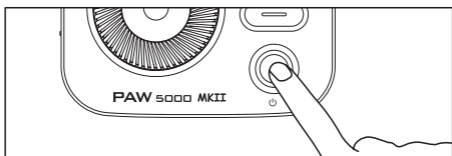

3. 充電

このプレーヤーは USB ケーブルを電源アダプターに接続すると自動的に充電します。プレーヤーの電源がオフになっている時には、「POWER」ボタンを長押しして電源をオンにしてください。

充電中に再生する：USB ケーブルが電源に接続されていれば、リチウム電池に充電しながら電力が供給されます。つまり、充電しながら音楽を再生することができます。これによって充電の速度に影響が出ることもありません。

注：USB 電源アダプターはスマートフォン充電用のアダプターなど別売り製品をお使い下さい。

ファームウェアのアップデート

1. ファームウェアをアップデートする際は、まずバッテリー残量が15%以上であることを確認してください。15%未満の時は、先に充電をしてください。

2. Lotoo の公式ホームページ中のダウンロードページにアクセスして、最新のファームウェアをダウンロードします。

「PAW5KMK2.COE」という名称のファイルをコピーして、micro SDカードのルートにペーストします。

3. 設定メニューに入って、「メニュー → システム設定 → システム・アップデート」とクリックします。アップデートが完了するまで待ちます。正しい手順でアップデートすると、次のようにアップデートが進みます。

アップデート・ファイルを読み込み中



チェック完了、アップデートを開始します



アップデート中です



アップデートに成功しました




終了

4. アップデートが順調に完了すると、自動的に電源がオフになりますので、再び電源をオンにしてください。最新のファームウェアのバージョンは「メニュー → システム設定 → システム情報」で確認できます。


スポーツ用アームベルトの取り付け

1. 下図のように、アームベルトのベルト（マジックテープ）側を外側にして、左から挿入して右に通します。

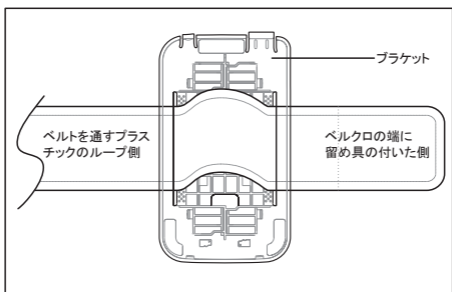

2. アームベルトを（右側から）引っぱって下

図のような状態にし、アームベルトの両端を少し斜めにしながら ブラケットのフックの下に挿入します。

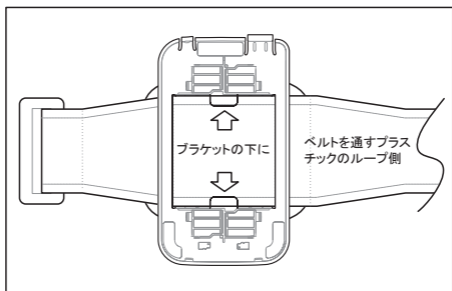

3. アームベルトの両端の溝をフックでパチンと留めます。

注意 : アームベルトを使用しない時は、予期せぬ損傷を防ぐため、PAW5000MKII をベルトから取り外してください。

ブルートゥース

1. / を長押しして設定メニューに入り、ジョグダイヤルをまわして「ブルートゥース設定」を選び、「OK」を押します。

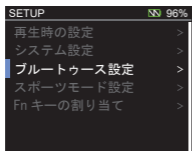


Figure 1

2. 「Bluetoothス・スイッチ」を選んで「OK」を押し、「ON」にセットします。

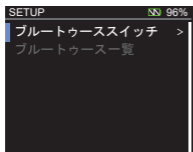


Figure 2

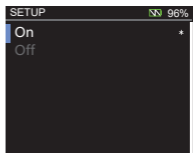




Figure 3

3. / を押して上位メニューに戻り、「Bluetoothス・一覧」に入ります。

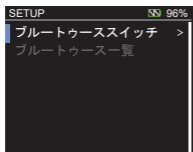


Figure 4

4. Bluetoothス・ヘッドフォンまたはBluetoothス・スピーカーのスイッチを入れ、ペアリング・モードにします。

PAW5000MKII で、「新しいデバイスをスキャン」を選びます。

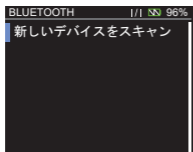


Figure 5

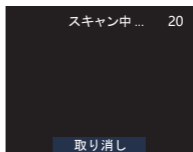


Figure 6

5.5. ご使用のデバイス名が見つかったら、「OK」

を押してスキヤニングを停止するか、または数秒後にスキヤニングが終了するのを待ちます。



Figure 7

6. デバイス名を選んで「OK」を押し、接続します。

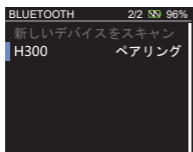


Figure 8

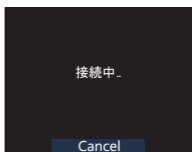


Figure 9

7. デバイスの右側に「接続」と表示されたら、接続は完了です。

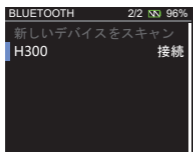


Figure 10

8. /を3回押して再生画面に戻ります。

9. これでBluetoothで音楽を再生できます。

注意

1. 機器を安全にお取り扱いいただくために

- この機器を分解しないでください。故障の原因になる恐れがあります。
- この機器を悪天候下では使用しないでください。事故の原因になる恐れがあります。
- この機器を埃や煙の多い場所で使用しないでください。故障の原因になる恐れがあります。
- この機器とその周辺機器に衝撃を与えないでください。重大な故障の原因になる恐れがあります。
- この機器を化学溶剤や洗剤で清掃しないでください。故障の原因になる恐れがあります。
- この機器を強力な磁気を発生する物に近づけないでください。重大な故障の原因になる恐れがあります。
- この機器の上に重い物を置かないでください。故障の原因になる恐れがあります。
- この機器を極度に湿度の高い環境で使うのは避けてください。故障する原因になる恐れがあります。

2. 充電池を安全にお使いいただくために

- 充電池を火の中に入れてたり、加熱したりしないでください。爆発する可能性があります。
- 充電池が高温になる現象が見られた場合には、直ちに使用を中止し、サポートへご連絡ください。事故の原因になる恐れがあります。

輸入・発売元：有限会社トップウイング

製品についてのご質問・ご購入者様サポート：ENZO j-Fi LLC.

Lotoo コンタクトページ <http://lotoo.jp/contact.html>

FCC Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio / TV technician for help.

名称：数字音频播放器



型号：PAW 5000 MKII

输入电压和电流：5V $\overline{\text{---}}$, 1A

制造商：北京英夫美迪电子技术有限公司

使用环境：仅适用于在海拔 2000 米以下地区安全使用，仅适用于非热带气候。 CMIIT ID:2015DP4402

Name: Digital Audio Player



Model: PAW 5000 MKII

Input voltage and current: 5V $\overline{\text{---}}$, 1A

Manufactory:

Beijing Infomedia Electronic Technology Co., Ltd.

Operation condition:

Altitude up to 2000m, Non tropical climate

CMIIT ID:2015DP4402

中国制造 / Made in China



203-JN0459

北京英夫美迪电子技术有限公司

Beijing Infomedia Electronic Technology Co.,Ltd.

北京市海淀区翠微路 2 号院中国印刷科学技术研究所 B 座四层

Floor 4, B Building, Printing Academy, No. 2 Cuiwei Road,
Haidian District, Beijing, China.

客服电话 / Customer Service Tel : +86 4006538168

乐图官网 / Lotoo Website : www.lotoo.cn